 


SETUP GUIDE

SmartGift WordClock

Connect to Wi-Fi step by step

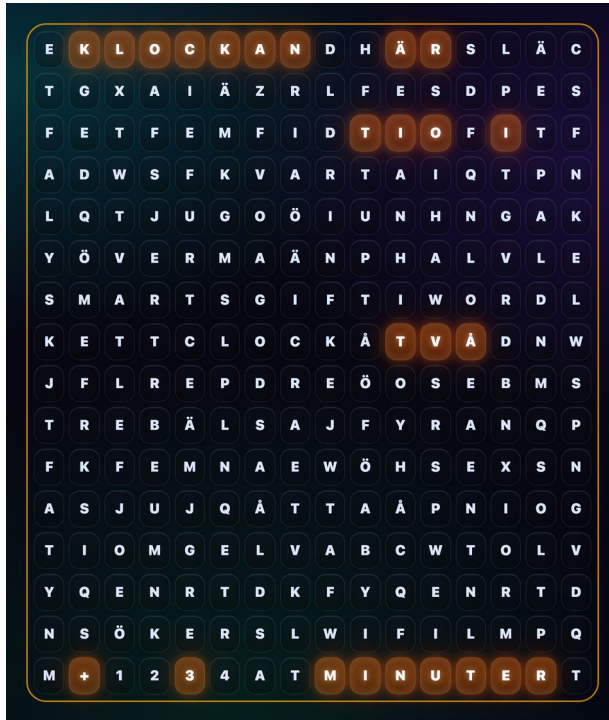

Follow the steps in order. Scan the QR code for the latest instructions and support.




Latest instructions and support

Step 1 · Power on your WordClock

Time: 30 seconds

Place the WordClock where you want to use it and connect the power supply. During startup, SMART, GIFT, WORD and CLOCK light up in rainbow colors.

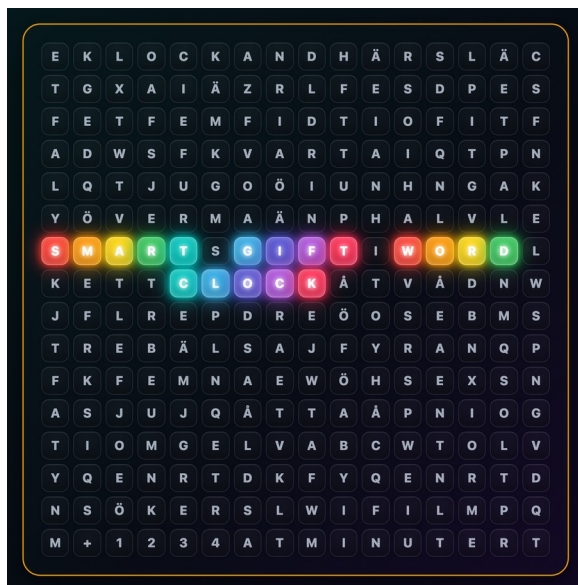

What to do

- Connect the USB cable to the WordClock.
- Plug the power adapter into a wall outlet.
- Wait for the colorful SMART · GIFT · WORD · CLOCK startup sequence.
- Then wait until the setup Wi-Fi network becomes available.

Tip On first startup, it may take a few seconds for the setup network to appear.

Step 2 · Connect to WordClock-Setup

Time: 1 minute

Open the Wi-Fi settings on your phone or tablet and connect to the WordClock setup network.

Setup Wi-Fi access

- 1 Wi-Fi network: WordClock-Setup
- 2 Password: 12345678
- 3 Select the network and connect

What to do

- Open Wi-Fi in your device settings.
- Select the network “WordClock-Setup”.
- Enter “12345678” as the password.
- Confirm the connection.

Important A “No Internet Connection” message is normal at this stage. Stay connected to WordClock-Setup.

Tip Enter all eight digits of the password. Mobile data normally does not need to be switched off.

Step 3 · Open the setup page

Time: 30 seconds

The setup page often opens automatically after connecting. The Wi-Fi name and password fields are shown further down the page.



Browser address <http://192.168.4.1>

What to do

- Continue if the setup page opens automatically.
- Otherwise, open Safari, Chrome or another browser.
- Enter <http://192.168.4.1> directly in the browser address bar and open it.


Important Do not enter the address into a search engine. Type it directly into the browser address bar.

Tip The setup page works locally and does not require an internet connection.

Step 4 · Connect to your home Wi-Fi

Time: 1 minute

Now connect the WordClock to your normal home Wi-Fi network.

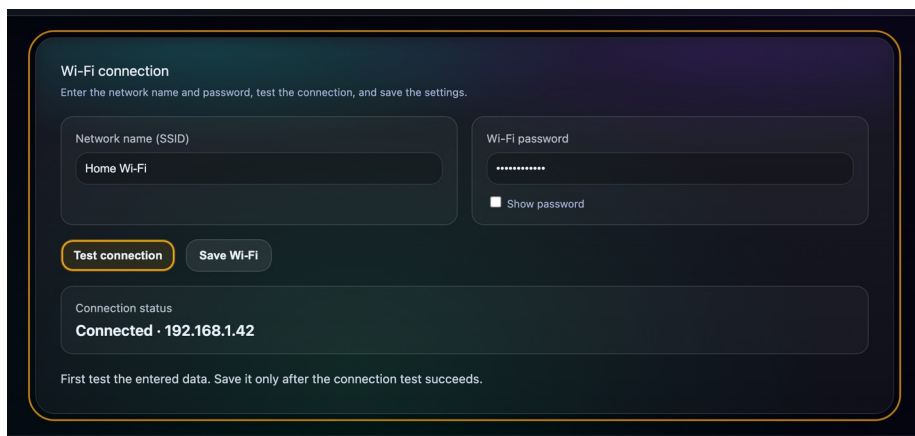

The screenshot shows a dark-themed interface for connecting to a Wi-Fi network. At the top, it says "Wi-Fi connection" followed by the instruction "Enter the network name and password, test the connection, and save the settings." Below this are two input fields: "Network name (SSID)" with the text "Home Wi-Fi" and "Wi-Fi password" with a masked password ".....". A checkbox labeled "Show password" is next to the password field. Below the input fields are two buttons: "Test connection" (highlighted with a yellow border) and "Save Wi-Fi". At the bottom, a "Connection status" box displays "Connected · 192.168.1.42". A footer note reads "First test the entered data. Save it only after the connection test succeeds."

What to do

- Select or enter the name of your home Wi-Fi network (SSID).
- Carefully enter your Wi-Fi password.
- Select “Test” first, then “Save”.

Important Wi-Fi passwords are case-sensitive. Uppercase and lowercase letters must be entered exactly.

Tip If the test fails, check the password and make sure the home Wi-Fi signal is strong enough where the clock is placed.

Step 5 · Wait for restart and connection

Time: 1 minute

After saving, the WordClock closes the setup network and connects to your home Wi-Fi.



What to do


- Do not disconnect the WordClock from power.
- Wait approximately 30 to 60 seconds.
- When the current time appears, setup is complete.

Tip Your phone will usually reconnect to your normal home Wi-Fi automatically.

Step 6 · Open your WordClock later

Time: 30 seconds

After setup, you can open the WordClock settings through your home Wi-Fi.

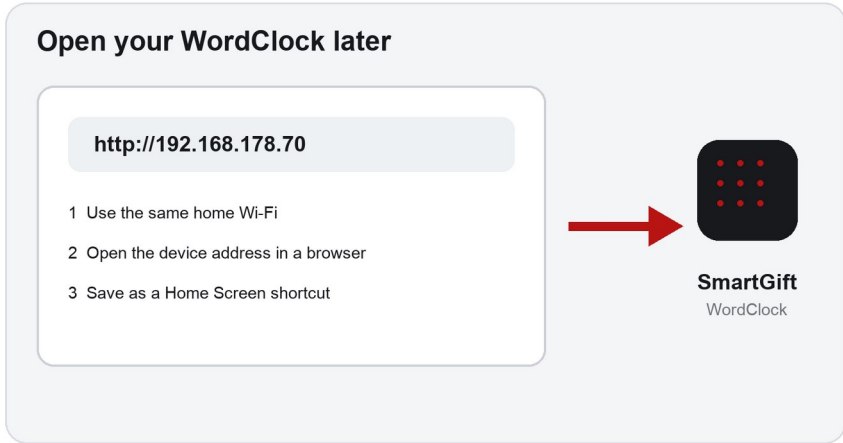

What to do

- Connect your phone or tablet to the same home Wi-Fi as the WordClock.
- Open the device address shown on the dashboard in a browser, for example <http://192.168.178.70>.
- For easier access, save the open page as a Home Screen shortcut.

Important The setup address <http://192.168.4.1> only works while connected to WordClock-Setup. On your home Wi-Fi, use the device address shown on the dashboard.


Tip Note the device address after setup or create the Home Screen shortcut immediately.

Step 7 · Add a Home Screen shortcut

Time: 1 minute

This lets you open your WordClock settings with one tap, just like an app.

Add a Home Screen shortcut

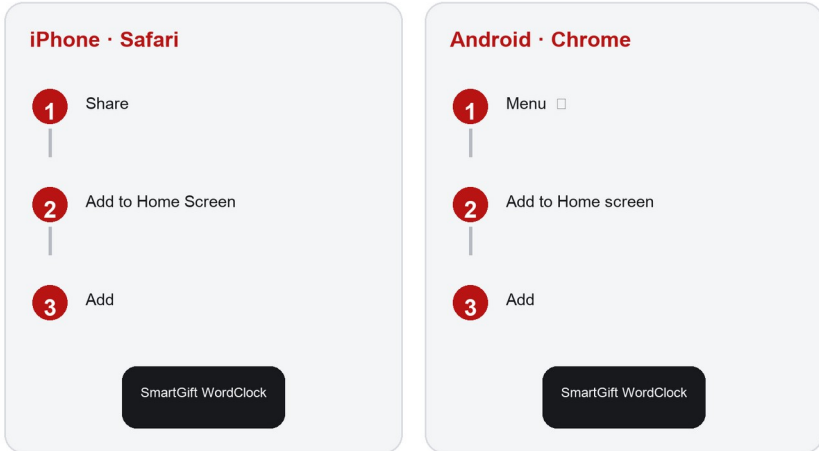

What to do

- iPhone: Open the page in Safari, tap Share, choose “Add to Home Screen”, then tap “Add”.
- Android: Open the page in Chrome, tap the : menu, choose “Add to Home screen” or “Install app”.
- A “SmartGift WordClock” icon will then appear on your Home Screen.


Tip Your phone must be connected to the same home Wi-Fi as the WordClock.

Done Done: Your WordClock settings are now available with one tap.

Step 8 · If the connection does not work

Time: 2 minutes

These steps solve the most common setup problems.

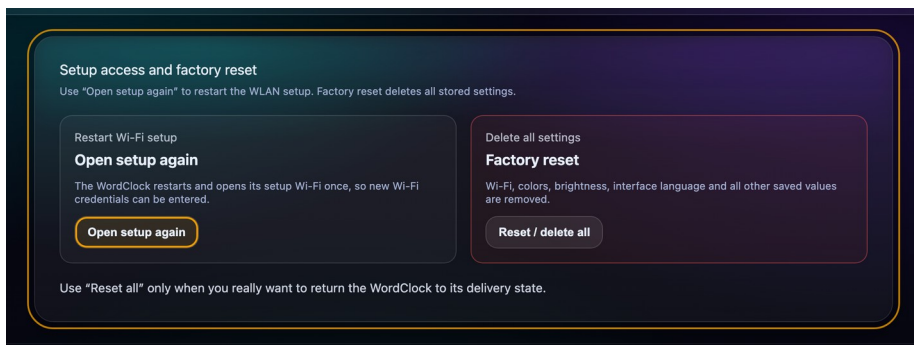

What to do

- Check the Wi-Fi name and password.
- Try placing the WordClock closer to your Wi-Fi router.
- Use “Open setup again” and enter the Wi-Fi details again.
- Use factory reset only when a complete new setup is required.

Important Factory reset deletes all saved Wi-Fi and device settings.

Tip For further assistance, contact kontakt@smart-gift.de.

Step 9 · Setup complete

Time: —

Your SmartGift WordClock is now set up and ready to use.



Latest instructions and support

What to do

- Latest instructions and support: www.smart-gift.de/anleitung
- Support: kontakt@smart-gift.de

Tip Scan the QR code for the latest instructions and support.

Done The WordClock now synchronizes the time and daylight-saving changes automatically.

Document 1.1 · Firmware 5.0.1 · Publisher 6.5.3 · 2026-07-20