 


SmartGift WordClock

The essential functions at a glance.

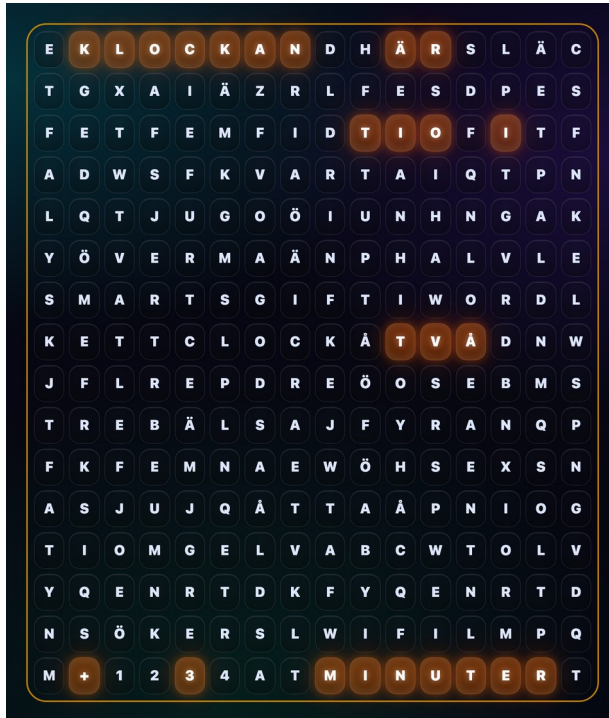

This guide focuses on the most important functions.




Latest instructions and support

Step 1 · Initial setup

Time: 1 minute

When switched on for the first time, the WordClock creates its own Wi-Fi network for setup.

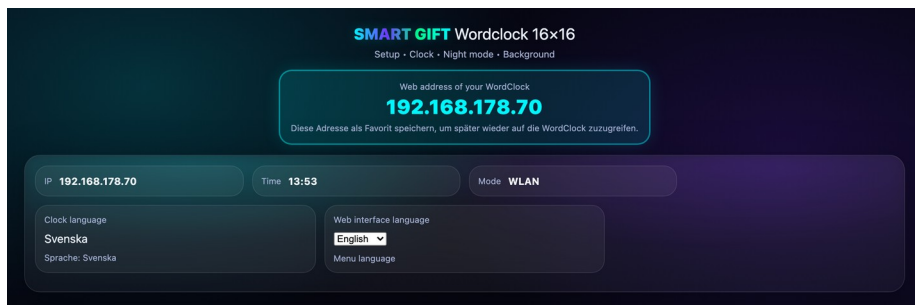

What to do



- Connect the USB power adapter.
- Connect to “WordClock-Setup” and enter the password “12345678”.
- Open the setup page in your browser.

Tip After saving, the clock connects to your home Wi-Fi automatically.

Step 2 · Time and interface language

Time: 30 seconds

The time is normally synchronized automatically through the internet.

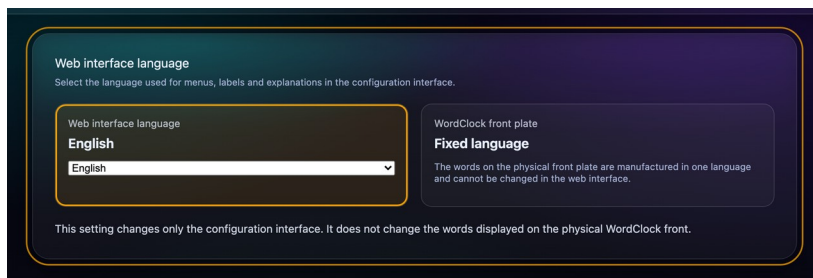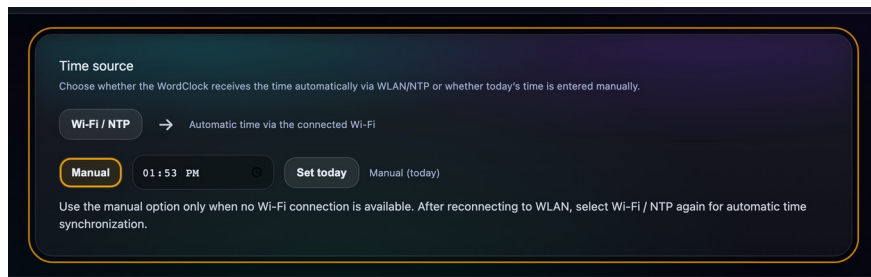

What to do


- Keep automatic time synchronization enabled.
- Set the time manually only when no internet connection is available.
- The web interface language can be changed at any time.

Tip The language of the physical front plate is fixed and cannot be changed.

Step 3 · Display

Time: 30 seconds

Adjust the clock color, brightness and background lighting to suit your room.

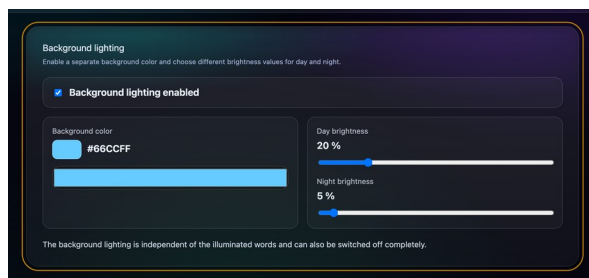

What to do


- Choose the clock color.
- Set the daytime brightness.
- Enable and adjust the background lighting if required.

Tip Changes are shown on the WordClock immediately.

Step 4 · Night mode

Time: 30 seconds

At night, the display can be dimmed automatically or switched off completely.

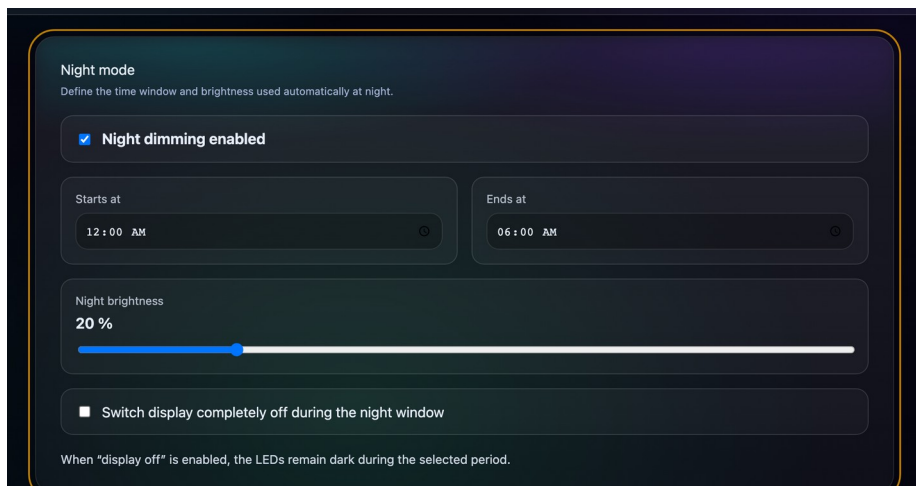

What to do



- Set the start and end times.
- Choose the night brightness.
- Optionally switch off the display during this period.

Tip A low brightness setting is usually sufficient in bedrooms.

Step 5 · Wi-Fi and setup

Time: 1 minute

Connect the WordClock to your home Wi-Fi or reopen the setup mode.

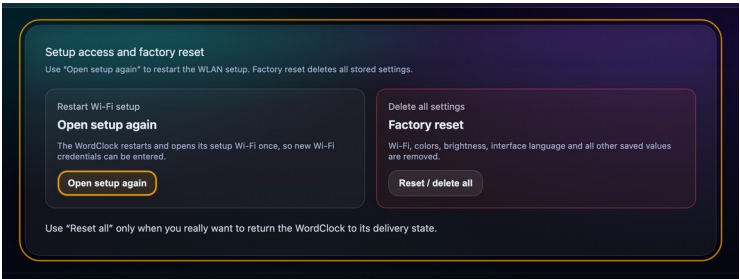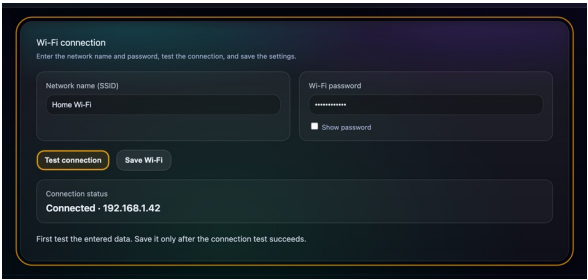

What to do


- Enter the network name and password.
- Test the connection and save it.
- Use “Open setup again” when required.

Tip Factory reset deletes all saved Wi-Fi and device settings.

Step 6 · Firmware update

Time: 2 minutes

New functions and improvements can be installed directly through the web interface.

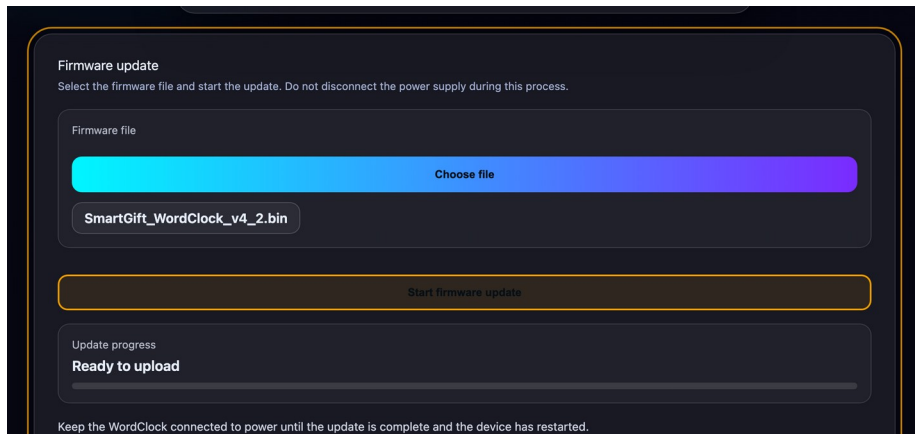

What to do

- Select the firmware file.
- Start the update.
- Do not disconnect the power during the update.

Tip The WordClock restarts automatically after a successful update.

Step 7 · Help

Time: —

The latest instructions and additional information are always available online.



Latest instructions and support

What to do

- Scan the QR code or open www.smart-gift.de/anleitung.
- Support: kontakt@smart-gift.de

Tip The online version always contains the latest instructions.

Document 1.1 · Firmware 5.0.1 · Publisher 6.5.3 · 2026-07-20